


# FLEX


# Mounting guide

#### Important warnings and safety instructions

- **X** Avoid exposing the camera to shocks, high pressure or temperatures above 40°C.
- **X** Avoid placing the camera near fans, ventilation or other noise sources. This will degrade audio performance.
- X Avoid placing the camera near fans, ventilation, or other heat sources. This will degrade sensor performance.
- **Avoid** scratching or leaving fingerprints on the lens, this degrades image quality. If possible, keep the protective plastic on the lens cover during installation.
- **X Do not** clean the camera with harsh detergents, gasoline or chemicals such as Acetone.
- **X Do not** try to repair the unit yourself. Refer all servicing of the camera to Ava or contact a reseller.
- Prolonged use of the white LEDs may affect sensor readings.
- ! This product should be supplied by a Power over Ethernet (PoE) Power Sourcing Equipment (PSE) compliant with IEEE 802.3af or USB-C power source rated 5V 1.5A. The power supply should be UL-listed and marked "Limited Power Source" or "LPS".
- ! The camera and the PoE PSE must be installed within the same building, as described by Environment A of the IEEE 802.3af standard. The PoE PSE must be properly grounded.


#### Box content

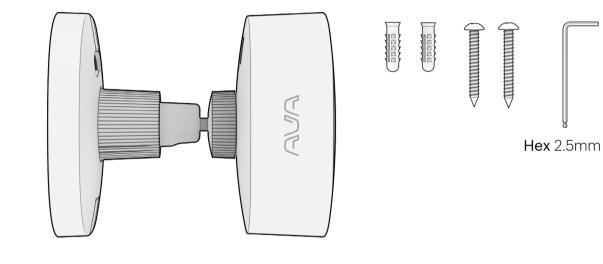

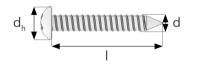

#### Screw dimensions

**d**<sub>h</sub> = 9.4 mm **I** = 32 mm **d** = 4 mm

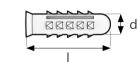


#### Anchor dimensions

l = 25 mm d= Ø6mm / ¼ "


### **Required:**


PH2 screw driver Drill with 6mm (1/4") drill bit"

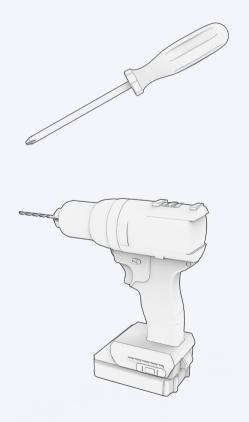


# 


## Cable routing alternatives

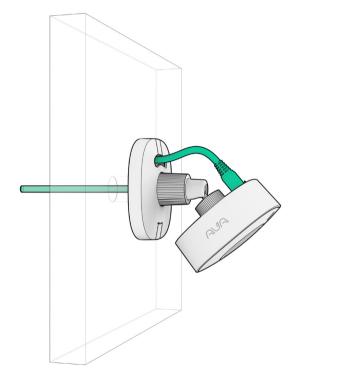

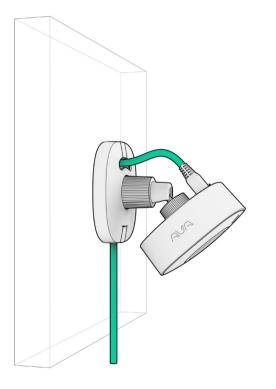

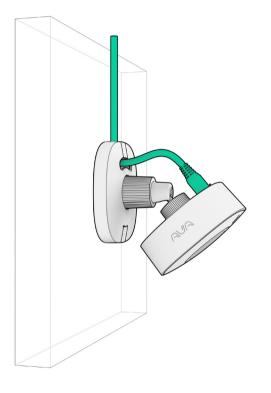



### Installing the bracket

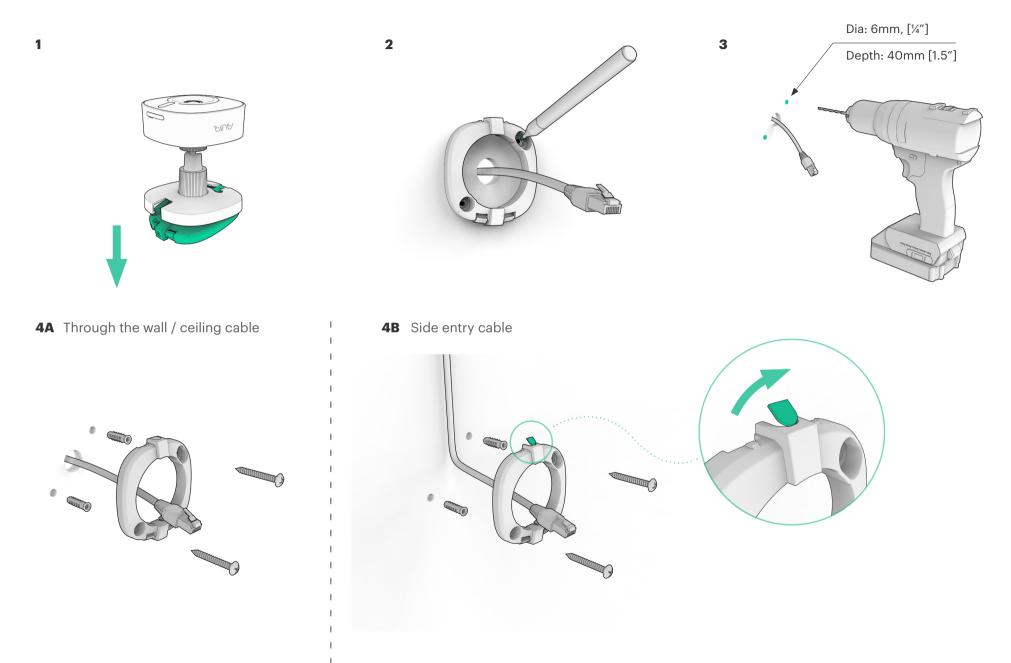

### Attaching the camera and connecting the ethernet cable


7

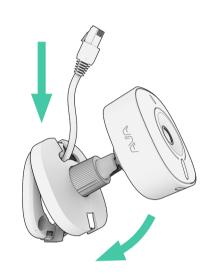


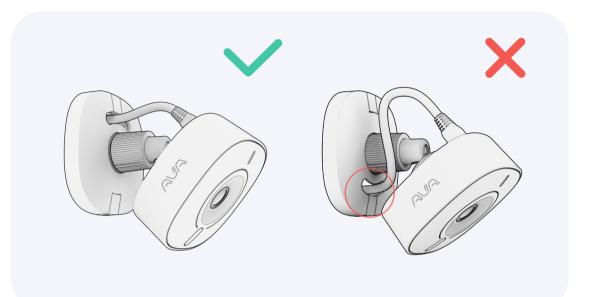

6


5

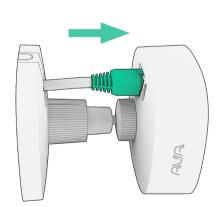


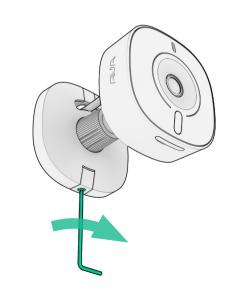


Ava Flex • Mounting guide | 6/7

### Adjusting the ball joint and video stream

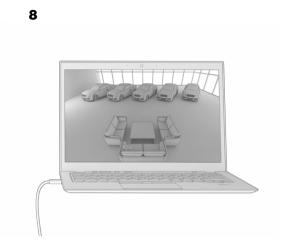

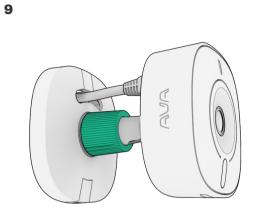

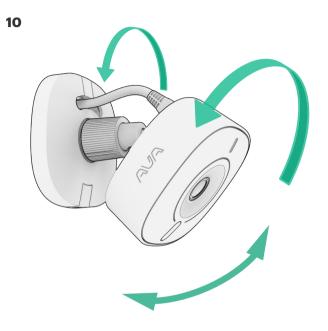

Adjust the image orientation in Ava Aware.

11

